


ROTARY SWITCH SETTINGS

WIRING TYPES	
0 C2 WIRING	
1 B2 WIRING	
2 D1 WIRING	
3 E2 WIRING	
4 T WIRING	
5 TS WIRING	
PROGRAM SETTINGS	
6 MID-STOP TIMER TO CLOSE	
8 WARNING LIGHT TIMER	
9 SBC SINGLE BUTTON CONTROL	
B TIME TO CLOSE	
C MID-STOP	
D RUN-TIMER	

NOTE:-
FOR ROTARY SWITCH SETTINGS
SETTINGS AND PROGRAMMING
PROCEDURES, REFER TO
INSTRUCTION MANUAL


EXTERNAL WIRING

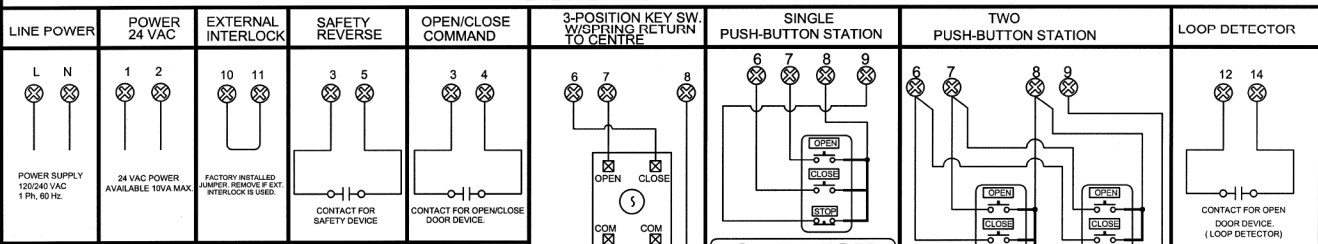

WARNING
1 - USE 18AWG OR HIGHER FOR WIRING ALL EXTERNAL CONNECTIONS
2 - MOTORIZED DOORS CAN CAUSE SERIOUS INJURIES OR DEATH. MANARAS STRONGLY RECOMMENDS THE USE OF ENTRAPMENT PROTECTION SYSTEMS, ESPECIALLY IN THE OF CASE MOMENTARY CONTACT TO CLOSE AS IN B2 WIRING

THE INFORMATION CONTAINED HEREIN IS PROPRIETARY TO MANARAS-OPERA AND SHALL NOT BE REPRODUCED OR DISCLOSED OR USED FOR ANY DESIGN OR MANUFACTURE EXCEPT WHEN USER POSSESSES DIRECT WRITTEN AUTHORIZATION FROM MANARAS-OPERA

TITLE: WIRING DIAGRAM, 120/208/220VAC, 1- PHASE
DRAWN BY: BP DATE: 21.JAN.2011 ICAD FILE: MECB11-70-N11-W REV: B DATE: 06.JUNE.2011
MANARAS-OPERA
136 ONEIDA DRIVE
POINTE-CLAIRE, QC H9R 1A8
TEL: 1-800-361-2260
FAX: 1-888-626-0606

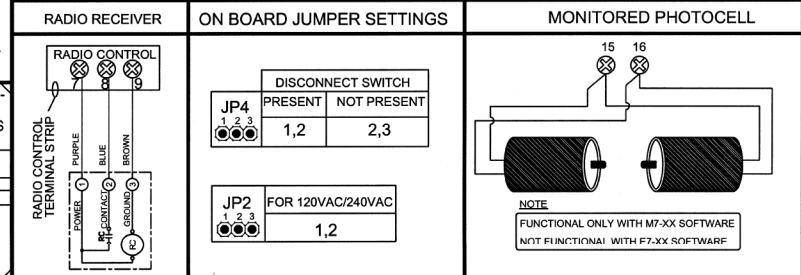

NOTE: FUNCTIONAL ONLY WITH M7-XX SOFTWARE NOT FUNCTIONAL WITH E7-XX SOFTWARE